



SCAN FOR
MORE INFORMATION

DRIJA

1 YEAR
WARRANTY

STEAM AIR FRYER CALZONE

4.5L



**TEMPERED
GLASS**



RANGE HOODS



COOKTOPS




MICROWAVES



OVENS



WINE COOLERS

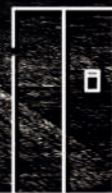

REFRIGERATORS



WATER
HEATERS

USER MANUAL

110V / 60Hz

NOTE: To purchase accessories and / or spare parts for this product, contact us at the Contact Center (depending on the number of your country that indicates the warranty certificate or our social media)

www.drijainternational.com


IMPORTANT INFORMATION

- Please read this manual carefully before using the air fryer. This manual contains important information concerning your safety, as well as recommendations on the correct operation of the unit and its maintenance.
- Please use a separate electrical outlet, do not share the plug with other electrical appliances.
- Do not use on an uninsulated table or place a heating pad under the product before use.
- This product is for household use only.
- For the first use or when the glass pot cools down, you can preheat it for better effect.
- Do not touch the glass cooker when cooking.
- Food should be placed on the rack and not block the air duct.
- When cooking, do not add water or other non-ventilated/non-temperature resistant utensils (such as plastic) to the glass cooker, so as not to affect the cooking effect.
- After use, immediately unplug the power cord.
- Please unplug the power supply and wait for the product to cool down completely before cleaning.
- Do not clean the machine directly with water, you can use a soft wrung out cloth to wipe off stains, do not use alcohol or abrasive and/or volatile substances to clean the product.
- When the product is working, the distance between the product and the wall must be more than 10cm.
- If you find the product has abnormal noise or strong vibration during use, please turn off the power first, and then contact the authorized center for check and/or repair.
- Do not use a damaged power supply or plug to avoid electric shock and fire.
- This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge (including children) unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- If the power cord is damaged, it must be replaced by professionals such as the manufacturer and its service department.

PRODUCT PARAMETERS

NAME	MODEL	VOLTAGE	FRECUENCY	POWER
STEAM AIR FRYER	CALZONE	110V	60Hz	1200W

PRODUCT STRUCTURE

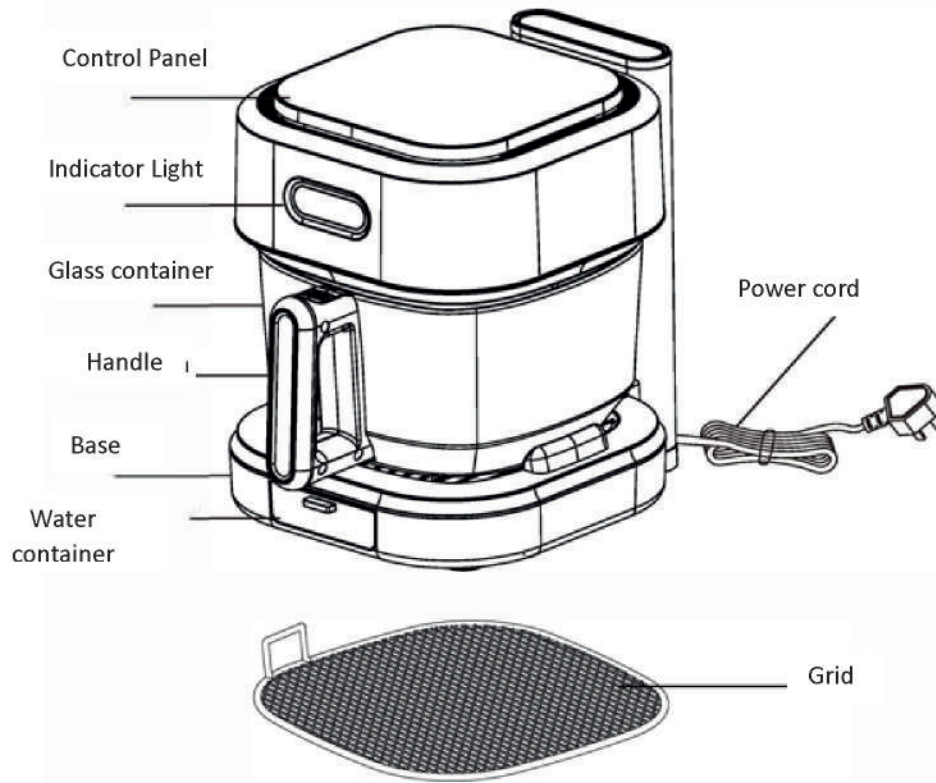


Note: the product image is for reference only, it is subject to the actual product and its accessories.

IMPORTANT

El fabricante tiene el derecho a realizar cambios de diseño sobre el producto. El producto que ha comprado puede haber sido mejorado y puede no ser consistente con el manual, sin embargo; no existirá cambio en el desempeño de este, por favor utilice el producto con confianza.

CONTROL PANEL

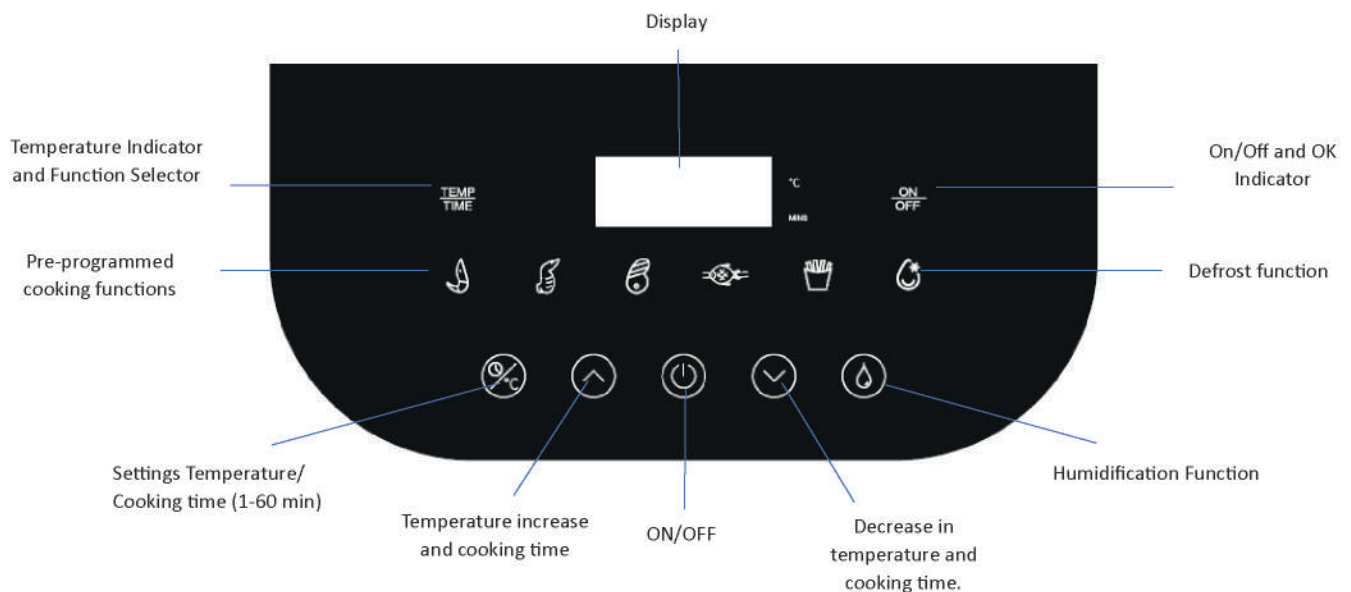


INSTRUCTIONS FOR USE


Before use, the water container must be carried, the product must be on a flat surface, DO NOT stick the product to the wall could obstruct the air outlet, so it could present errors in use.

Please follow these instructions:


1. Remove the water container

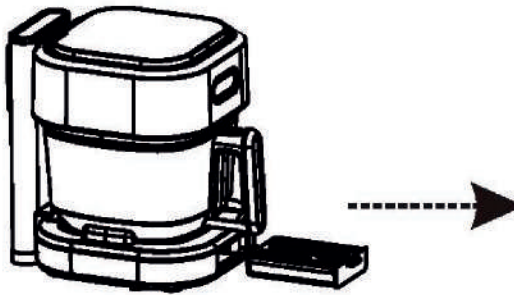


2. Open the silicone stopper and fill the container with water.

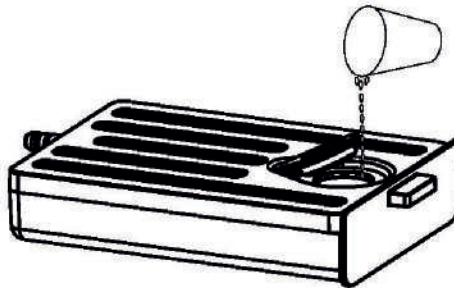


3. Return the container to its original position

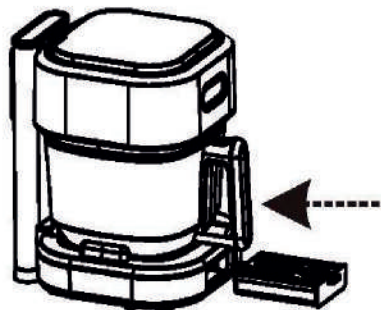


1. Hold the handle and pull the glass container.

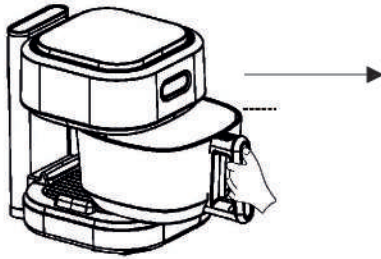


2. After cleaning the grid and the container, place the grid inside the container.

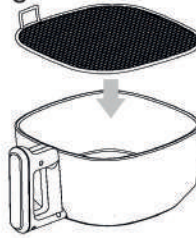

3. Distribute food evenly

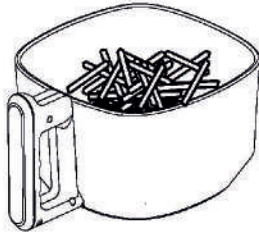

4. After placing the food, push the container into the main unit.

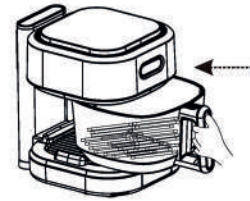

5. Connect to the power source, insert the cable into the socket.




6. Press  to turn on and program the unit



7. When the desired programming is selected, the corresponding indicator will light up.



8. After selecting, press  to start cooking.








Note: if there is no confirmation within 3 seconds, the fryer will start operation automatically.



 



9. To adjust the temperature and cooking time press 




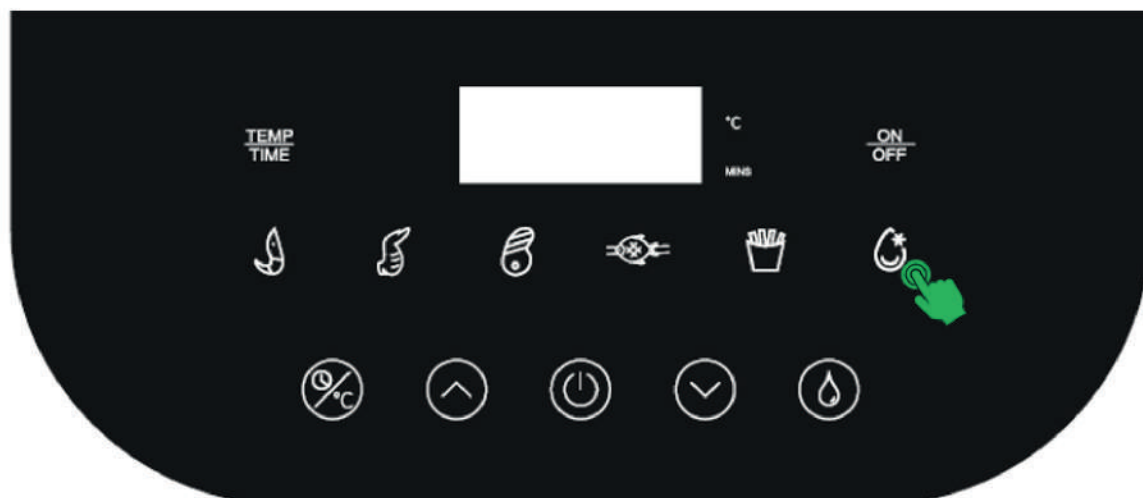
Note: The automatic humidification function can be programmed after selecting the desired program, this process will be done automatically during cooking. Make sure there is water in the lower vessel for proper operation.

- **Programmed auto power-on function:** press  and select the time to start operation (from 30 min ~ 12 hours), then press  to select the desired setting and press  to confirm the setting. It will start to operate after the set start-up time has elapsed. The programmed auto-start times can be adjusted from 1 min   by pressing to increase or decrease the programmed auto-start time.

PROGRAM / TEMPERATURE / COOKING TIME


PROGRAM	DEFAULT TEMPERATURE	TEMPERATURE RANGE	DEFAULT TIME	COOKING TIME RANGE
	200°C	60°C ~ 200°C	8 MINS	1~60 MINS
	180°C	60°C ~ 200°C	15 MINS	1~60 MINS
	200°C	60°C ~ 200°C	30 MINS	1~60 MINS
	180°C	60°C ~ 200°C	13 MINS	1~60 MINS
	190°C	60°C ~ 200°C	11 MINS	1~60 MINS
	60°C	60°C ~ 200°C	15 MINS	1~60 MINS

This air fryer also allows you to defrost your food. A very useful function that can save you from a hurry. To program the defrosting function, select  wait 3 seconds and it will start operating automatically.




RECOMMENDATIONS

Note: The fryer has a reminder alarm, which will sound 3 times to turn the food. At the end of the cooking cycle the alarm will sound 3 times, indicating that your food is ready for consumption.

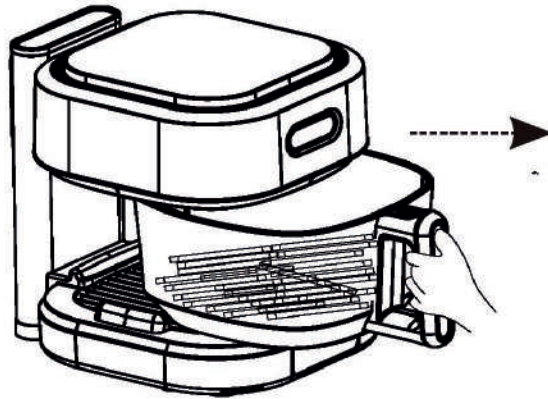

At the end of the cooking cycle, the unit is in standby mode, you can remove the glass container and place it on a heat resistant surface. We recommend that when the product is not in use, unplug it from the electrical outlet.

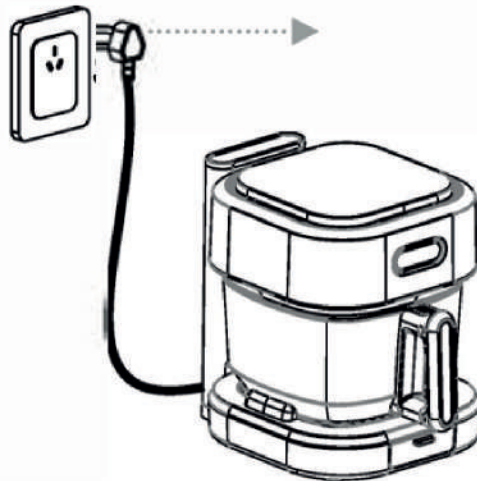

IMPORTANTE

1. For precaution and safety, **DO NOT** touch the glass container while it is cooking, you may suffer burns.
2. Be careful with the air outlet and steam discharge to avoid burns.
3. Product should be kept out of reach of children; they may suffer burns if they come into contact with the glass container.

CLEANING AND MAINTENANCE

Note: Wait until the glass container cools down before cleaning.

1. Before cleaning, disconnect the power cord from the outlet.
2. The glass container and rack can be washed in an automatic dishwasher.
3. Please avoid bumping the glass basket during the cleaning process.
4. After washing, you can dry the glass container and rack with a dry cloth.

FAILURE ANALYSIS

FAILURE	
Smoke and odors when using the product for the first time	When using for the first time, use for 5 minutes without food, so that the film that protects the internal parts evaporates.
Product does not work	Check if the product is properly connected to the outlet, or if the glass container is correctly placed inside the device.
Product does not heat	Check if the power button is on, or if the carbon fiber heating tube is illuminated.
	The heating tube does not illuminate, please contact after-sales service.
Broken glass container	Please contact after-sales service

If you have any problems during use, please contact our after-sales service.



In case your glass container breaks, keep the handle screws, they are indispensable.