



SCAN FOR
MORE INFORMATION

DRIJA

1 YEAR
WARRANTY

STEAMER/AIR FRYER PORCHETTA

 
4.5L
AIR FRYER



7.5L
STEAMER



**TEMPERED
GLASS**

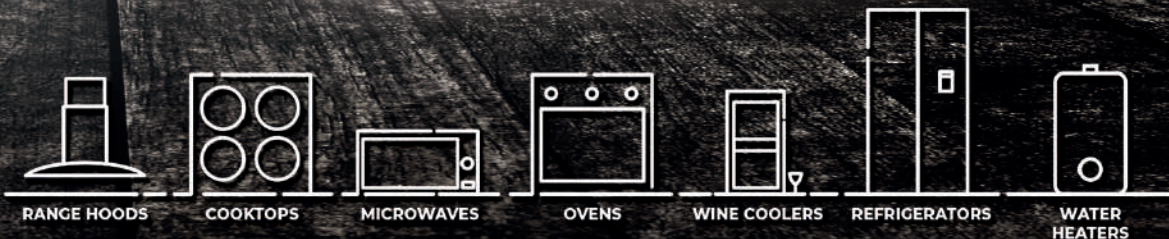

RANGE HOODS

COOKTOPS

MICROWAVES

OVENS

WINE COOLERS

REFRIGERATORS

WATER
HEATERS

USER MANUAL

120V / 60Hz

NOTE: To purchase accessories and / or spare parts for this product, contact us at the Contact Center (depending on the number of your country that indicates the warranty certificate or our social media)

www.drijainternational.com

IMPORTANT INFORMATION


- Please read this manual carefully before using the air fryer. This manual contains important information regarding your safety, as well as recommendations on the correct operation of the unit and its maintenance.
 - Please use a separate electrical outlet, do not share the plug with other electrical appliances.
 - Do not use on an uninsulated table or place a heating pad under the product before use.
 - This product is for household use only.
 - For the first use or when the glass pot cools down, you can preheat for better effect.
 - Do not touch the glass cooker when cooking.
 - Food should be placed on the rack and not block the air duct.
 - When cooking, do not add water or other non-ventilated/non-temperature resistant utensils (such as plastic) to the glass cooker, so as not to affect the cooking effect.
 - After use, immediately unplug the power cord.
 - Please unplug the power supply and wait for the product to cool down completely before cleaning.
 - Do not clean the machine directly with water, you can use a soft cloth wrung out to clean stains, do not use alcohol or abrasive and/or volatile substances.
- or abrasive and/or volatile substances to clean the product.
- When the product is working, the distance between the product and the wall must be more than 10cm.
 - If you find the product has abnormal noise or strong vibration during use, please turn off the power first, and then contact the authorized center for check and/or repair.
 - Do not use a damaged power supply or plug to avoid electric shock and fire.
 - This appliance is not intended for use by persons with reduced physical, sensory or mental capabilities, or by persons with lack of experience and knowledge (including children), unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
 - If the power cord is damaged, it must be replaced by professionals such as the manufacturer and its service department.

PRODUCT PARAMETERS

 
NAME	MODEL	VOLTAGE	FREQUENCY	POWER
2 IN 1 AIR FRYER	PORCHETTA	110V	60Hz	STEAMER 800W AIR FRYER 1200W

PRODUCT STRUCTURE

 
STEAMER

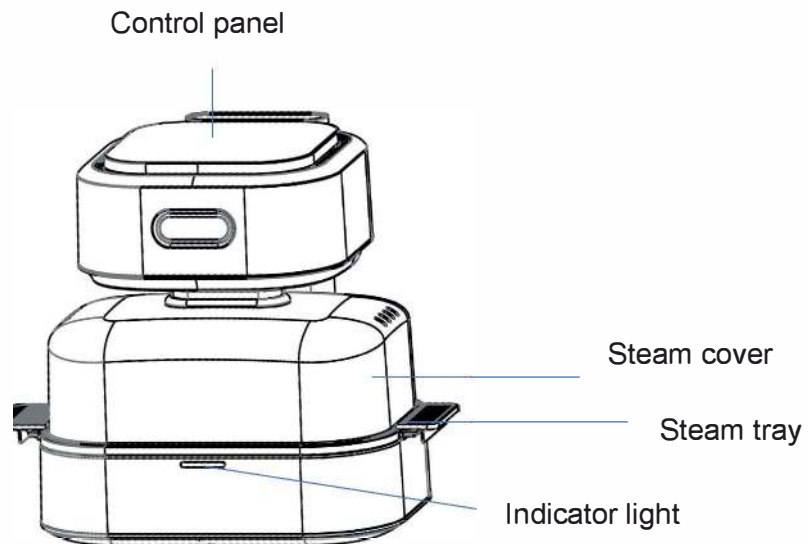

AIR FRYER

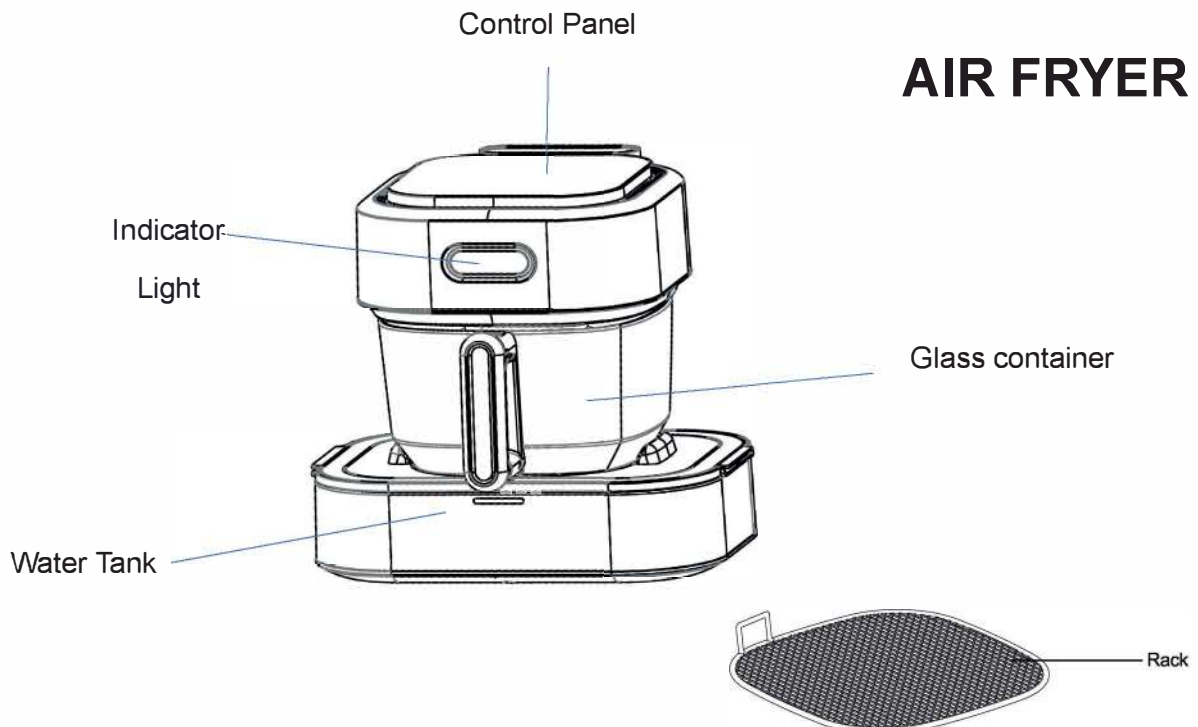

 

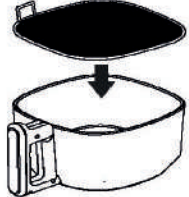 

CONTROL PANEL

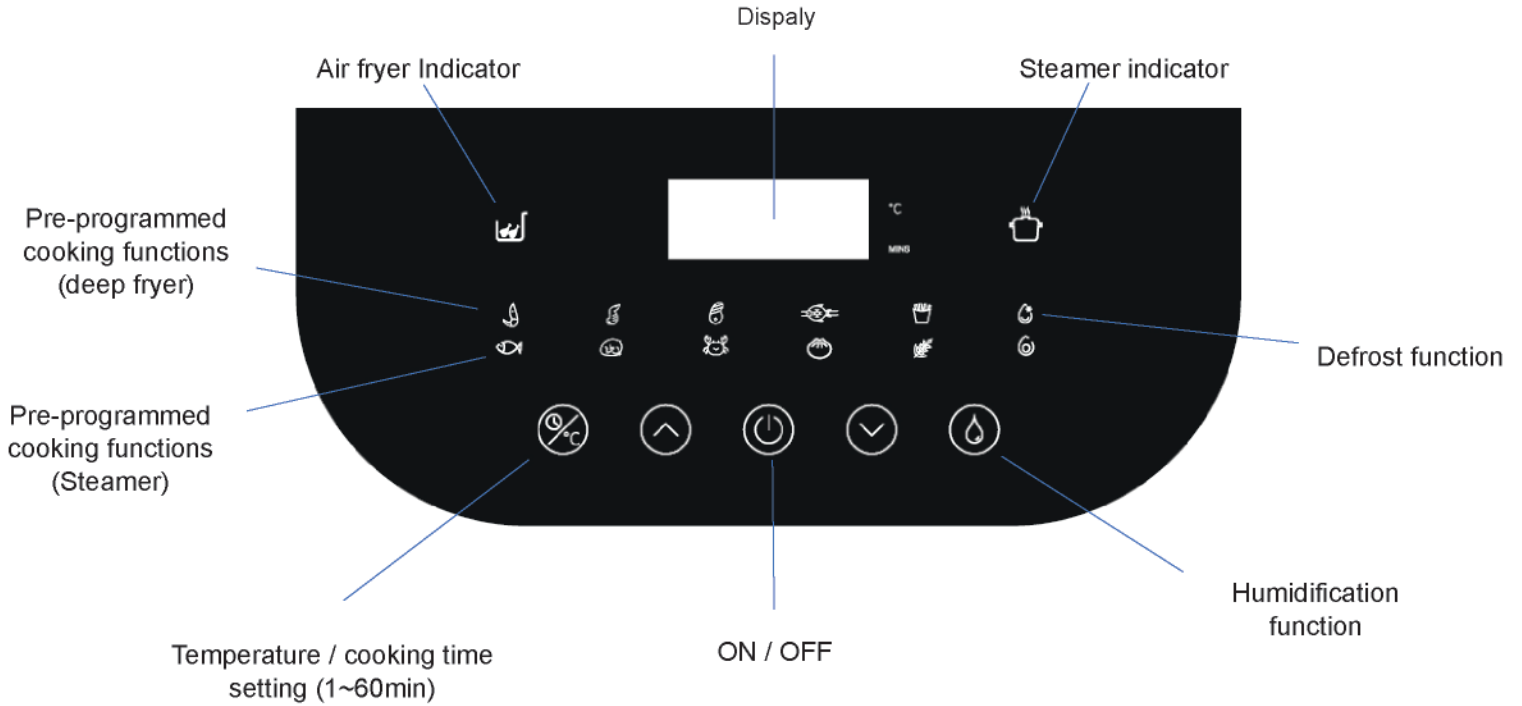

IMPORTANT

The manufacturer has the right to make design changes to the product. The product you have purchased may have been improved and may not be consistent with the manual, however, there will be no change in the performance of the product, please use with confidence.

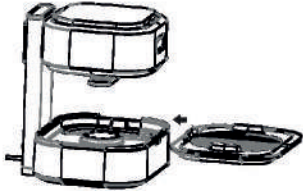


INSTRUCTIONS PRIOR TO USE AIR FRYER



<p>1. Remove the transparent tray and fill with water up to the maximum level indicated on the tray.</p> 	<p>2. Place the base of the fryer on the transparent one.</p> 
<p>3. Place the grid inside the glass container and distribute the food evenly.</p> 	<p>4. Place the glass container in the main unit.</p> 








NOTE: the product can identify the water level, please fill to the maximum level and do not exceed the allowed level.

Pre-programmed Fryer Functions






- Press  to turn the unit on, the indicator lights will turn on once and the power icon will flash.
- Press  to select the desired setting and press  to confirm the setting, if there is no confirmation of the setting within 3 seconds, the air fryer will automatically start operation. Once the setting has been selected, the display will show the cooking time and temperature.
- **Defrosting function:** this function is for defrosting food, to program it press

 to select  and wait 3 seconds for it to start operations automatically.

- **Humidification function:** this function is only enabled for programming (shrimp, fish and chicken). To program the function automatically; select the program and press  to program this function, then wait 3 seconds and it will start operating automatically. The automatic humidification will be performed automatically and depending on the cooking time (make sure the lower base has water to be used, otherwise it will give an error due to lack of water). **Manual humidification** can be used at the intervals you consider necessary, by pressing  to add a spray of water on your food to moisten your cooking food.
- **Programmed auto start function:** press  and select the time to start operation (from 30 min ~ 12 hours), then press  to select the desired setting and press  to confirm the setting. It will start to operate after the set start-up time has elapsed. The programmed auto-on times can be adjusted from 1 min by pressing   to increase or decrease the programmed auto-on time.
- You can program the cooking time and manual temperature for different foods. The preprogrammed functions have preset cooking times as well as temperature. For best cooking results you can adjust them.
- The unit has a reminder alarm, which beeps 3 times to turn the cooking food.
- At the end of your cooking time, the reminder alarm will beep 3 times; alerting you that your food is ready for cooking.




INSTRUCTIONS BEFORE USING THE AIR FRYER

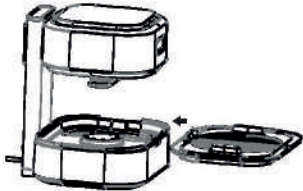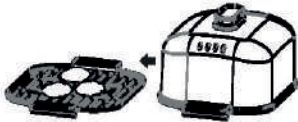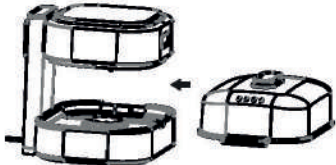NOTE: When the steamer function is to be used the icon will light up.

<p>1. Remove the transparent tray and fill with water up to the maximum level indicated on the tray.</p> 	<p>2. Remove the base of the fryer and place the steamer tray with its lid and the food in an even manner.</p> 
<p>3. Place the steam tray in the main unit.</p> 	






Pre-programmed functions Steamer



- Press  to turn the unit on, the indicator lights will turn on once and the power icon will flash.
- Press  to select the desired setting and press  to confirm the setting, if there is no confirmation of the setting within 3 seconds, the steamer will automatically start operation. Once the setting has been selected, the display will show the cooking time and temperature.
- You can program the cooking time and temperature manually to the different foods. The preprogrammed functions have preset cooking times and temperatures. For best cooking results you can adjust them.
- At the end of your cooking time, the reminder alarm will sound 3 times; alerting you that your food is ready for consumption.







PROGRAM / TEMPERATURE / COOKING TIME

AIR FRYER

PROGRAM	DEFAULT TEMPERATURE	TEMPERATURE RANGE	PREPROGRAMMED COOKING TIME	COOKING TIME RANGE
	200°C	60°C~200°C	8 MIN	1~60 MIN
	180°C	60°C~200°C	15 MIN	1~60 MIN
	200°C	60°C~200°C	30 MIN	1~60 MIN
	190°C	60°C~200°C	13 MIN	1~60 MIN
	190°C	60°C~200°C	11 MN	1~60 MIN

PROGRAM / TEMPERATURE / COOKING TIME

STEAMER

PROGRAM	TEMPERATURA RANGE	PREPROGRAMMED COOKING TIME	COOKING TIME RANGE
	60°C~200°C	10 MIN	1~60 MIN
	60°C~200°C	20 MIN	1~60 MIN
	60°C~200°C	30 MIN	1~60 MIN
	60°C~200°C	20 MIN	1~60 MIN
	60°C~200°C	25 MIN	1~60 MIN
	60°C~200°C	30 MIN	1~60 MIN

IMPORTANT

1. As a precaution and for safety reasons, DO NOT touch the glass container while it is cooking, you may suffer burns.
2. Be careful with the air outlet and steam discharge to avoid burns.
3. **Product should be kept out of reach of children; they may suffer burns if they come into contact with the glass container.**

CLEANING AND MAINTENANCE

Note: Wait until the glass container cools down before cleaning.

1. Before cleaning, disconnect the power cord from the wall outlet.
2. The glass container and rack can be washed in an automatic dishwasher.
3. Please avoid hitting the glass basket during the cleaning process.
4. After washing, you can dry the glass container and grid with a dry cloth.

FAILURE ANALYSIS

FAILURE	
Smoke and odors when using the product for the first time	When using for the first time, use for 5 minutes without food, so that the film that protects the internal parts evaporates.
Product does not work	Check if the product is properly connected to the outlet, or if the glass container is correctly placed inside the device.
Product does not heat	Check if the power button is on, or if the carbon fiber heating tube is illuminated.
	The heating tube does not illuminate, please contact after-sales service.
Broken glass container	Please contact after-sales service

If you have any problems during use, please contact our after-sales service.



In case your glass container breaks, keep the handle screws, they are indispensable.

DRIJA

UP TO
2 YEARS
WARRANTY

BUILT-IN
HOME APPLIANCES

